

INSTALLATION


CORNER GUARD & U-SHAPE END WALL CAP

90 DEGREE CORNER GUARD


STEP # 1 Check fit of corner guard



If wall corner is under 90 degrees & s.s. guard edges due not touch wall, lay s.s. on ground and using a rubber mallet tap edge until proper fit is achieved.

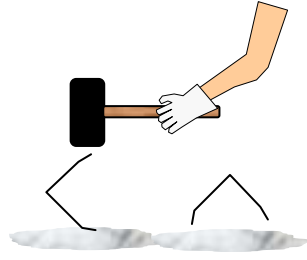


STEP # 2 Use 1/2" dia. bead adhesive as shown, stay approximately 3" from ends.

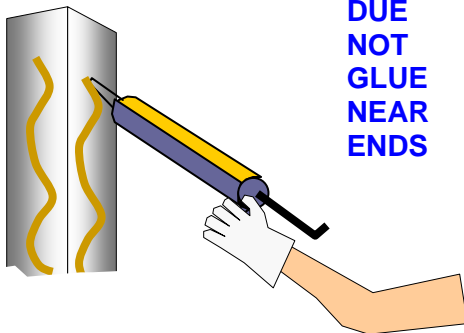

**DUE
NOT
GLUE
NEAR
ENDS**


STEP # 3 Place bottom against wall & bring the top up by matching the corner of the guard with the corner of the wall.

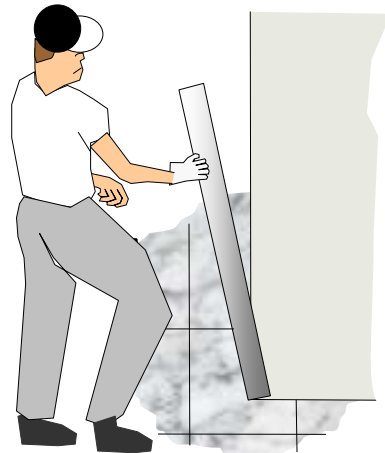


STEP # 4 CAULK TOP CLEAR & BOTTOM GRAY

U - SHAPE CORNER GUARD


STEP # 1 Check fit of guard, place backwards against wall.

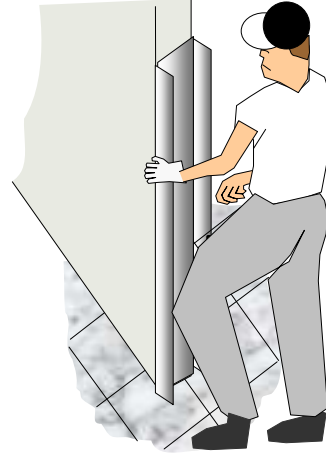

The bottom of the wall is larger due to track, studs & screws.

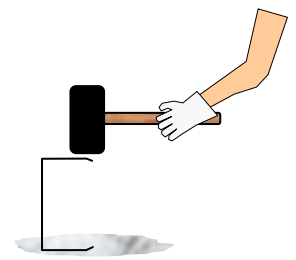


STEP # 2 Use 1/2 adhesive tube per guard, spread 1/2" + diameter bead as shown, stay Approximately 3" away from ends.

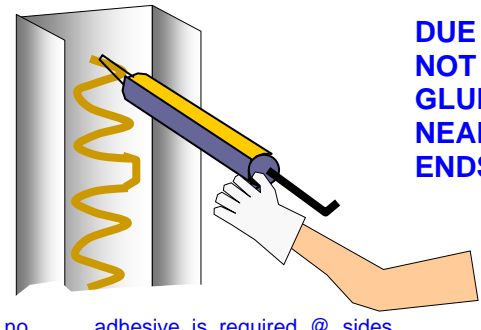

**DUE
NOT
GLUE
NEAR
ENDS**

no..... adhesive is required @ sides

STEP # 3 Place wrap against wall as shown, using a putty knife, bring wrap around then push.

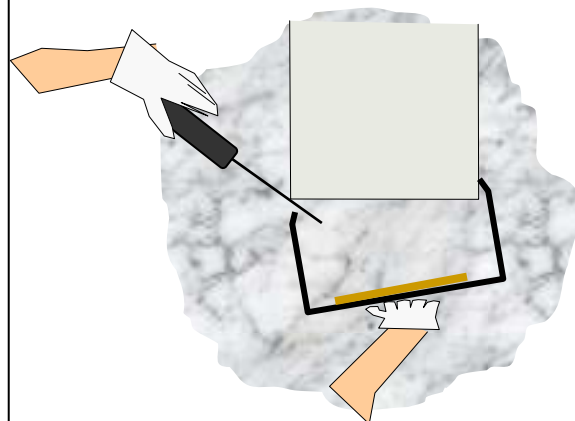

STEP # 4 CAULK TOP CLEAR & BOTTOM GRAY