


SQUARE COLUMN WRAPS

INSTALLATION

STEP # 1 Scrape column clean of all debris, usually concrete splatters.

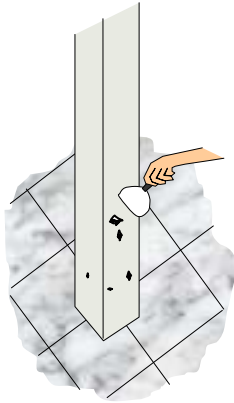


STEP # 2 Find location of seam, should face shelving fixtures, use leather gloves, grab wrap app. 1 ft. from bottom, expand open & slide down on column @ an angle,

warning* s.s. under pressure, position leg so wrap cannot slide out away from column & collapse.




STEP # 3 start with the top seam, place a putty knife under the 1" overlap, then start to close column with a squeeze clamp or tie straps provided.

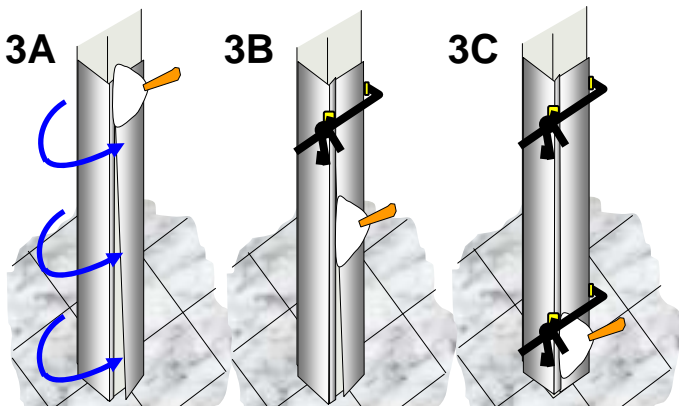


BRING 1" OVER LAP ALL THE WAY AROUND, TUCK LONGER SIDE UNDER LIP.

STEP # 4 Mark s.s. wrap as shown, use drill bits provided & drill thru s.s. & tube steel column. After holes completed, remove Pvc coating around holes.

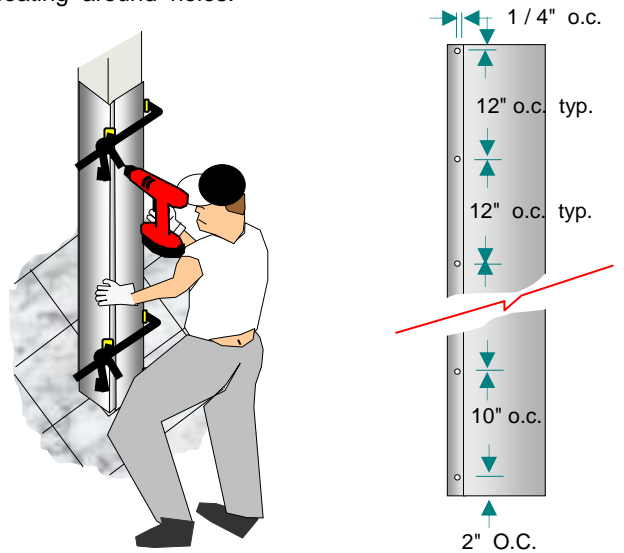

STEP # 5 Use s.s. pop rivets provided, remove clamps.

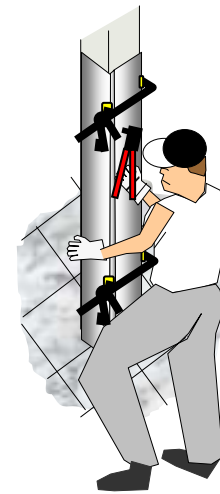

STEP # 6 use a utility knife to cut pvc coating @ the seam, then peel.

*CLEAR CAULK provided for the top of wrap.

*GRAY CAULK provided for the bottom of wrap.

* LEATHER GLOVES for installation purposes.

NOTE * leather gloves & safety glasses should be worn @ all times during installation.